

TABLE OF CONTENTS

Notice	2
1.0 Preface	2
2.0 Getting to know the basics	4
3.0 How to Start.....	7
3.1 Home Shell.....	7
3.1.1 Home Shell > Widgets (Search、RSS、Weather).....	8
3.1.2 Home Shell > Widgets , RSS Reader	10
3.1.3 Home Shell > Widgets, Weather	11
3.2 Music.....	12
3.3 Video	14
3.4 Gallery / Programs / Settings	15
3.5 Camera	16
3.6 WiFi	18
3.7 3G Connection	19
3.8 G Sensor	20
4.0 How to.....	21
4.1 How to do file transfer	21
4.2 How to connect to Application store.....	21

Notice

The illustrations in this users manual are for reference only. Actual product specifications may vary with territories. The information in this users manual is subject to change without notice.

THE MANUFACTURER OR RESELLER SHALL NOT BE LIABLE FOR ERRORS OR OMISSIONS CONTAINED IN THIS MANUAL AND SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES, WHICH MAY RESULT FROM THE PERFORMANCE OR USE OF THIS MANUAL.

The information in this users manual is protected by copyright laws. No part of this manual may be photocopied or reproduced in any form without prior written authorization from the copyright owners.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective owners/companies.

The software described in this manual is delivered under a license agreement. The software may be used or copied only in accordance with the terms of the agreement.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Reverse engineering or disassembly is prohibited.

1.0 Preface

1.1 Regulations Information

. FCC-B Radio Frequency Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.



CAUTION

Any changes or modifications not expressly approved by the guarantee of this device could void the user's authority to operate the equipment.

Notes for this Manual



CAUTION : Important information that must be followed for safe operation.



NOTE : Information for special situations.

1.2 Safety Instructions

The following safety precautions will increase the life of the Computer. Follow all Precautions and instructions.



Do not place this device underneath heavy loads or in an unstable position.



Do not use or expose this device around magnetic fields as magnetic interference may affect the performance of the device.



Do not expose this device to high levels of direct sunlight, high-humidity or wet conditions.



Do not block the air vents to this device or impede the airflow in any way.




Do NOT expose to or use near liquid, rain, or moisture.
Do NOT use the modem during electrical storms.

The unit can be operated at an ambient temperature of max. 35°C (95°F).
Do not subject it to temperatures below 5°C (41°F) or above 35°C (95°F).

2.0 Getting to know the basics

2.1 Product Overview


This section provides the description of basic aspects of the Mobii Tablet PC. Refer to the following illustration to identify the components on this side of the Mobii Tablet PC. Features and configurations vary by model.

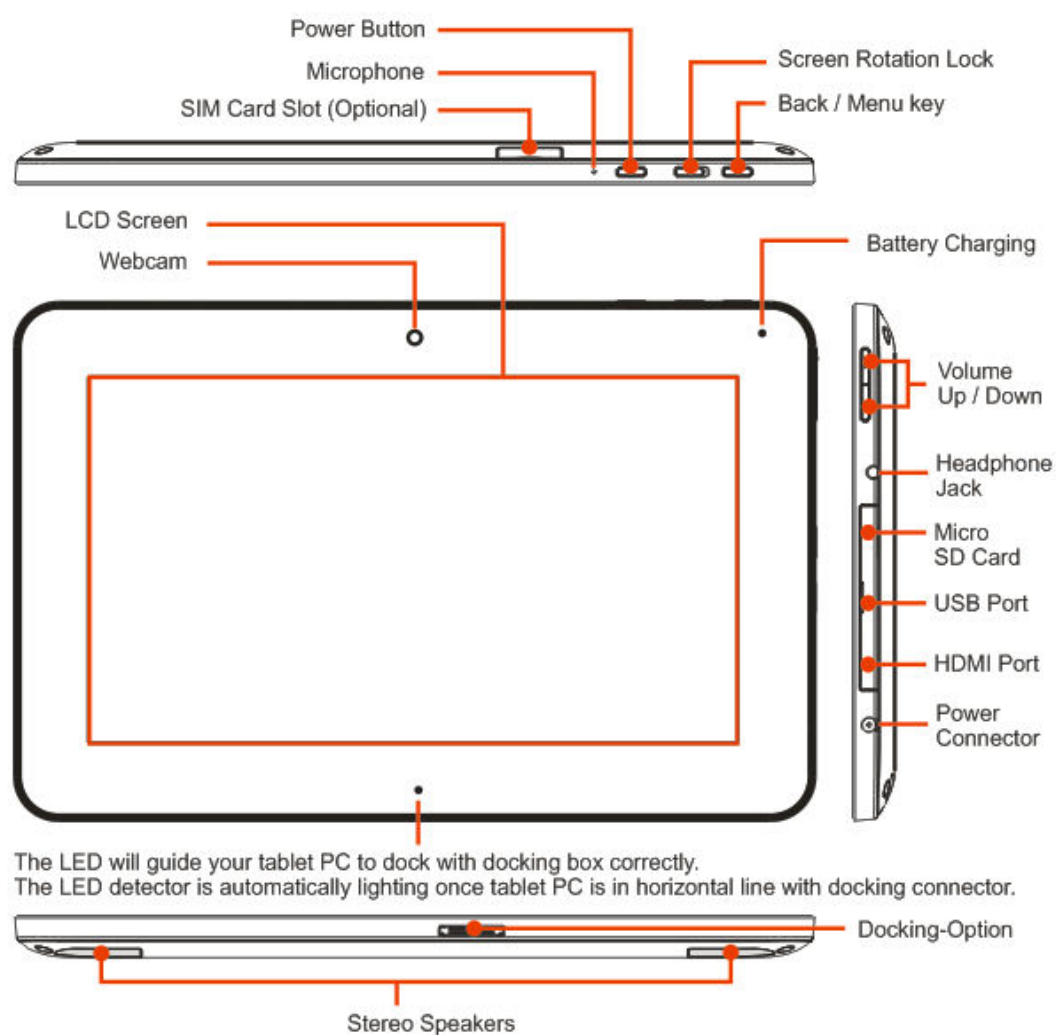

2.2 Preparing your Mobii Tablet PC

Note that the AC adapter included in the package is approved for your Mobii Tablet PC; using other adapter model may damage either the Mobii Tablet PC or other devices attached to it. Plug the AC adapter cable into the DC power connector on the left side of your Mobii Tablet PC.

Press the power button to turn on your Mobii Tablet PC.

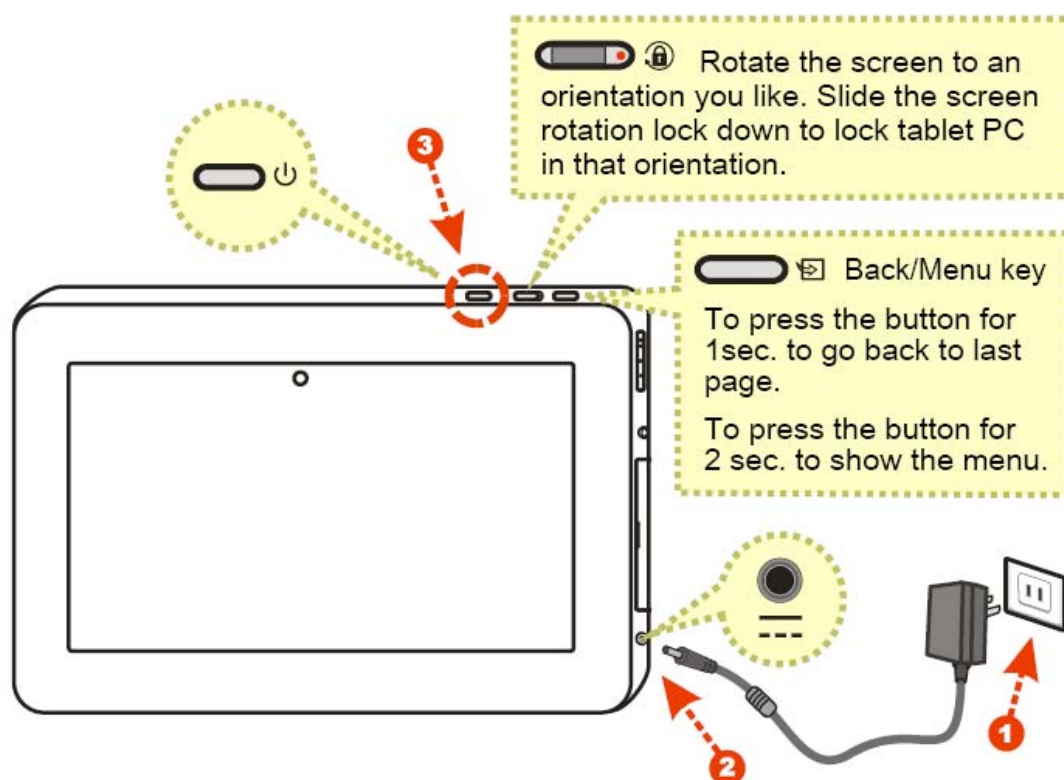

CAUTION: Do not use inferior extension cords as this may result in damage to your Mobii Tablet PC. The Mobii Tablet PC comes with its own AC adapter. Do not use a different adapter to power the computer and other electrical devices.

NOTE : The power adapter may become warm to hot when in use. Be sure not to cover the adapter and keep it away from your body.

2.3 How to insert/remove the micro-SIM card




CAUTION: Before to insert the SIM card, please ensure your power if turn off.



NOTE: This function may not be available on your tablet (optional)

To insert the SIM card in this Mobii Tablet PC, follow the steps below:

1. Remove the cover.
2. Insert the SIM card.
3. Attach the cover.
4. Wait for Mobii Tablet PC to recognize the SIM card.

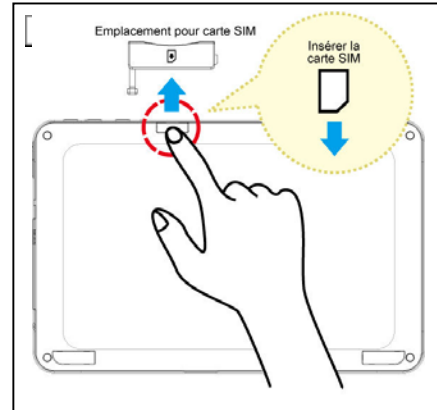

NOTE : If you want to remove the SIM card, just repeat step 1~3.

2.4 Cleaning the screen

Follow these rules for cleaning the outside and handling your screen on the computer :

1. Turn off the system and disconnect all cables.
2. Use a damp, or cleaning cloth, soft, lint-free cloth with gentle water only and gently wipe the screen surface.
3. Do not spray liquid directly on the screen.



NOTE : The product's color and specification will depend upon the actually shipping product.

2.5 Device setting overview

1. To set the and date
2. To set the time zone
3. Device language: Find and tap Settings > Locale & text > Select locale.

3.0 How to Start

3.1 Home Shell



- 1** Indicator bar- Notification: Display related real-time information.
- 2** Indicator bar- Status: Display Home, Back, Battery, Volume, WiFi, Bluetooth, 3G, Signal strength, Clock.
- 3** Widgets: Search, RSS reader, and Weather.
- 4** Tool bar: Internet, Mail, Music, Video, Gallery, Programs, Settings, User Guide



Warning: Please do safe remove for your Micro SD card.

(Setting → "SD card & device storage" → Unmount SD card)

3.1.1 Home Shell > Widgets (Search, RSS, Weather)






1. There are 3 widgets, including Search, RSS Reader, and Weather.
2. To click the widget in the rear to switch widgets.
3. Search: Input text strings on the blank to start a new search.

3.1.2 Home Shell > Widgets , RSS Reader




- 1 Current RSS Feed.
- 2 Current item number. Tap ← → for previous or next item.
- 3 Settings icon. Enter settings mode to manage RSS feeds.
- 4 Read this news from website.

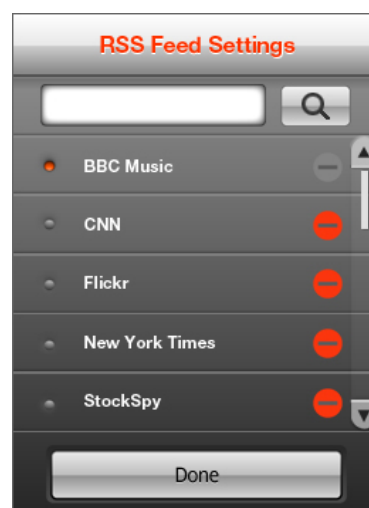

3.1.3 Home Shell > Widgets, Weather



- 1 Weather animation of current city
- 2 Current city
- 3 Current temperature / Highest, Lowest temperature
- 4 3 days forecast
- 5 Settings icon
- 6 The amount of dots indicates how many cities there are. Tap the dot once to view next city

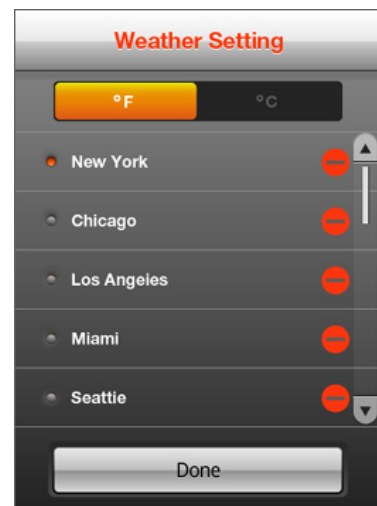


3.2 Music



CD cover



CD play

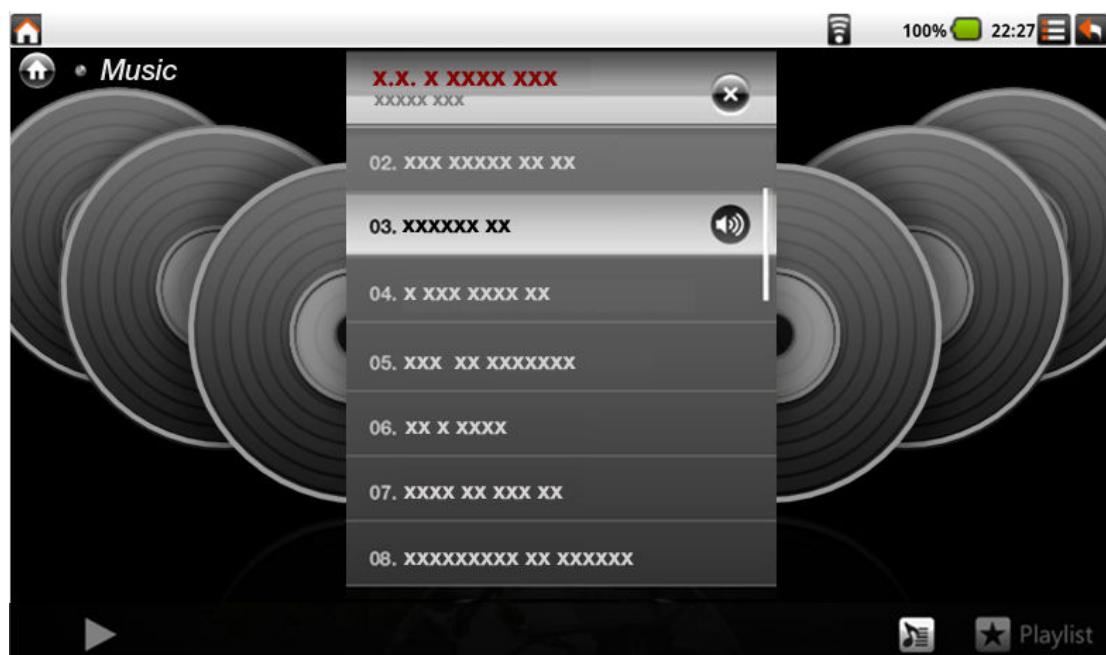


Playlist

- 1 Sort all supported file formats on Android OS and display by cover image. Tap the CD to enter CD play.
- 2 Play / Pause
- 3 Playlist
- 4 Switch 4 sorting ways: Album、Artists、Folder and Genres. If that song has no ID3 tag , collect it to one CD, name "Other".
- 5 Next / Previous song
- 6 Repeat all /Repeat one / Normal
- 7 Loop / Normal
- 8 Current song
- 9 Progress rate & Volume



3.3 Video

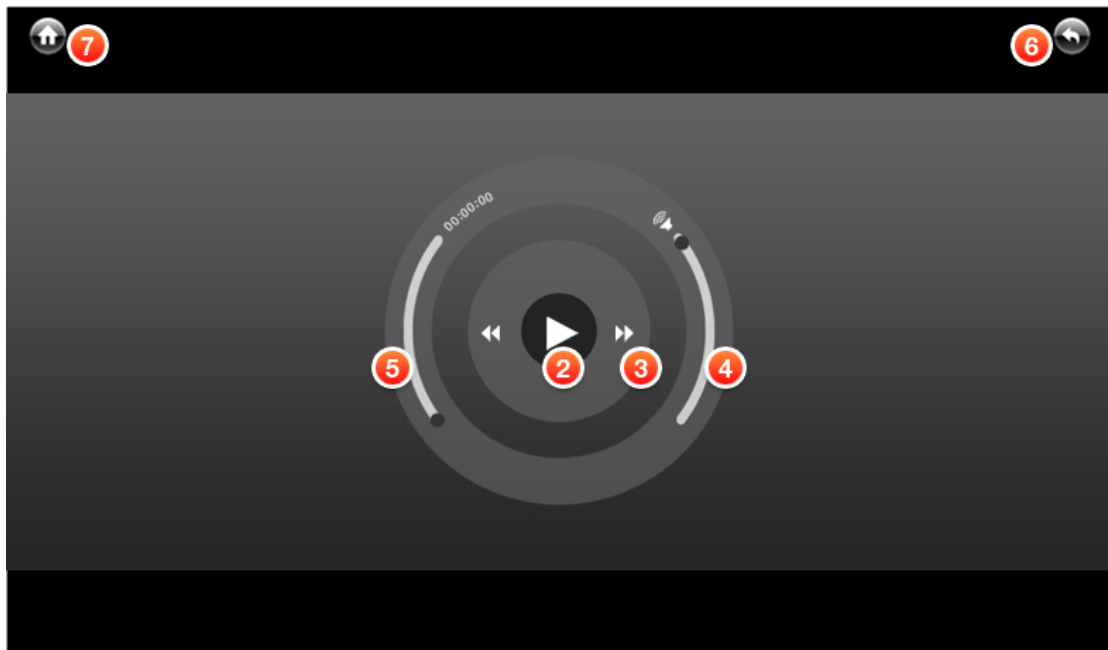


Control panel

- 1** Display from left top corner to right bottom corner in alphabetical order.
- 2** Play / Pause
- 3** Forward / Backward
- 4** Volume
- 5** Progress rate
- 6** Back to main page of video.
- 7** Back to Home shell.

3.4 Gallery / Programs / Settings





- 1 Gallery: Link to default Android Gallery.
- 2 Programs: Display all installed applications.
- 3 Settings: Link to default Android Settings.

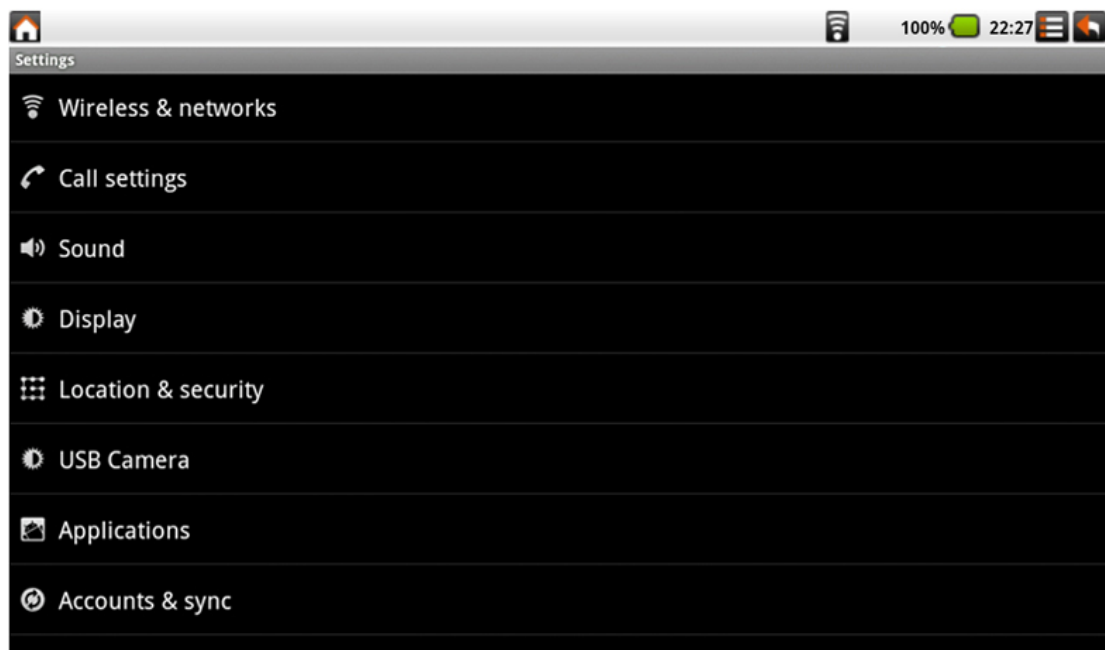

Click Settings icon to launch default Android Settings

3.5 Camera

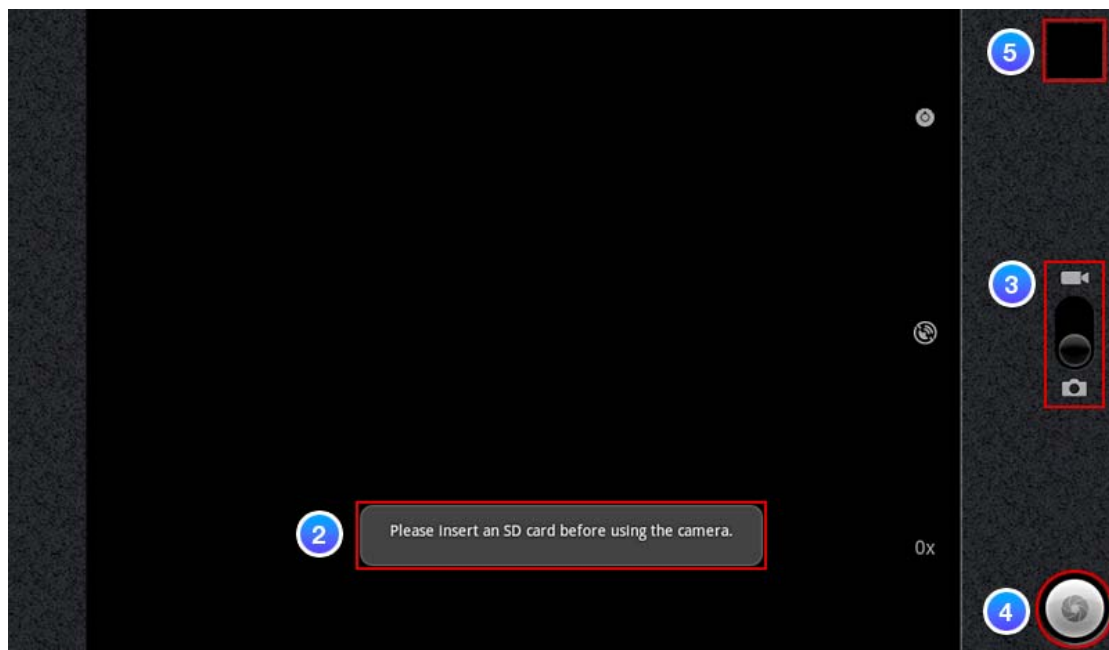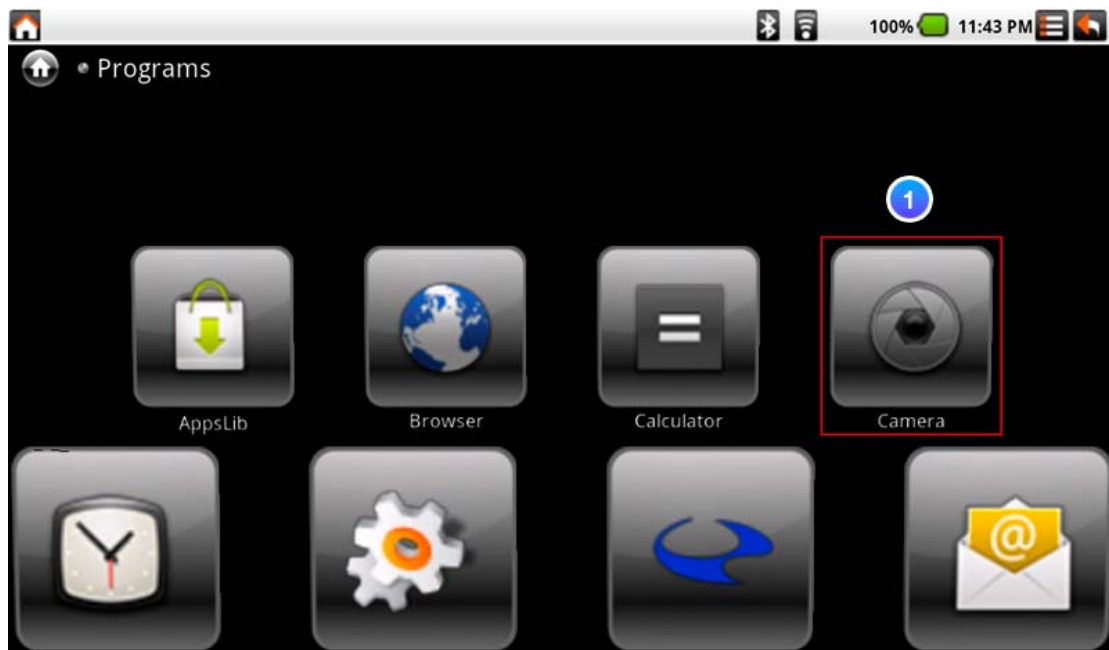

 **NOTE :** Before using Camera function, please ensure your Micro SD card is inside.

 1 Tap Camera application.

 2 Please Insert an SD card before using the camera.

 3

Select photograph mode  or Video mode 

 4 Tap  (photograph mode) or  (Video mode)

 5 You can see a pre-view window on the Top right corner.

 6 Tap the pre-view icon for editing.

 7 Tap "Back" key to left this function.

 **NOTE :** If you are not able to use camera, please go following steps:

(a) Settings

(b) USB camera


(c) Tap  to  to Enable USB Camera

(d) Tap Home button in status bar

(e) Tap Program


(f) Back to item 

3.6 WiFi

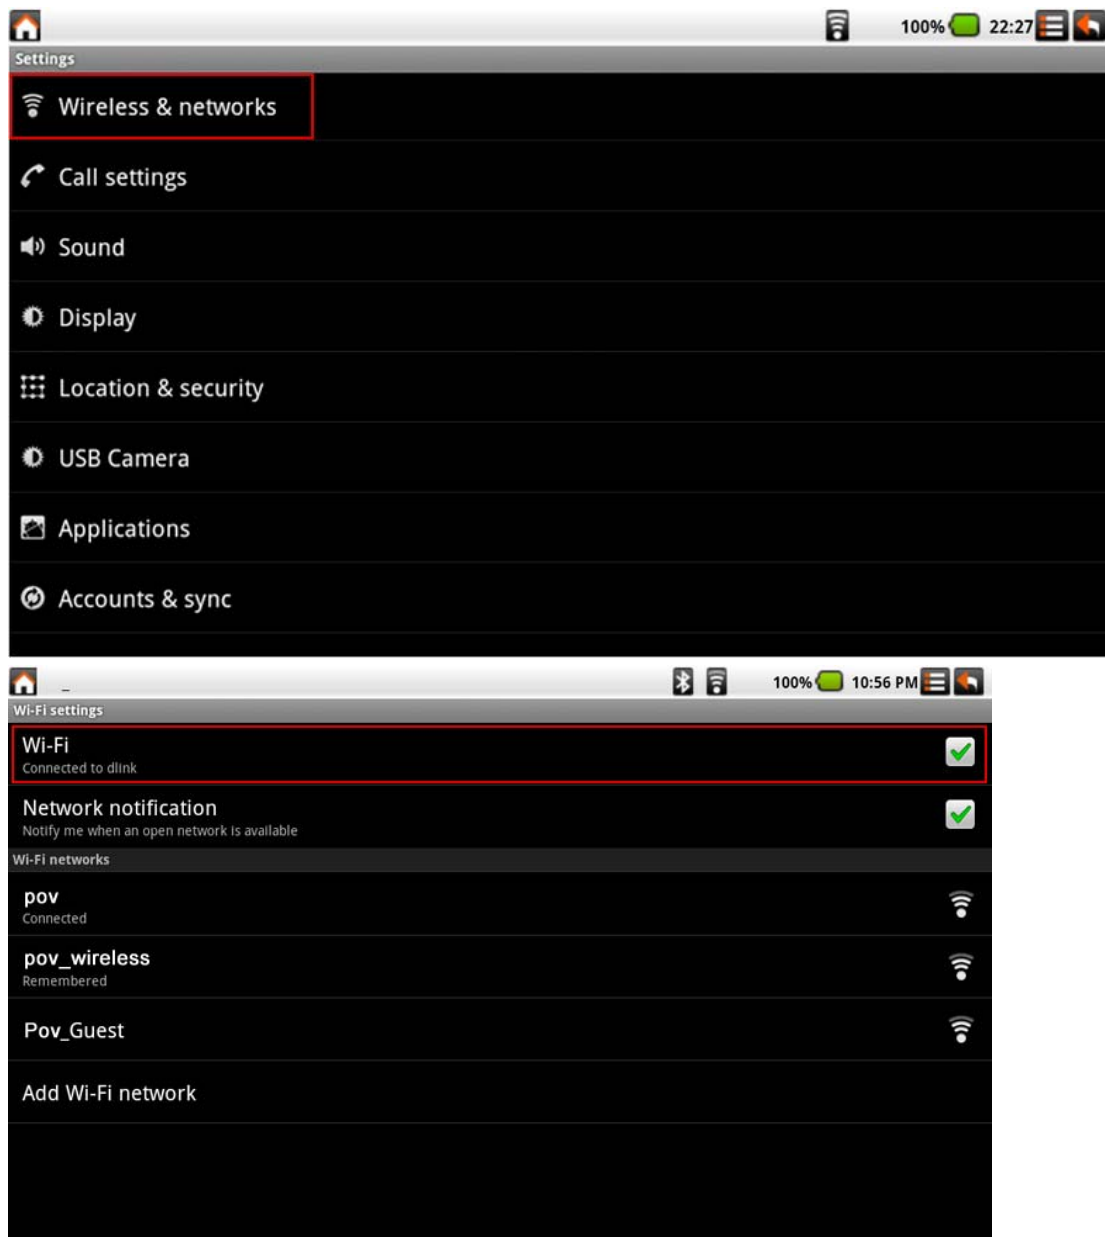

1. Settings
2. Wireless & networks
3. Wi-Fi : Tap  to 
4. Once Connected, it will show the AP message.
5. Tap Home button in status bar.
6. Open internet application

3.7 3G Connection

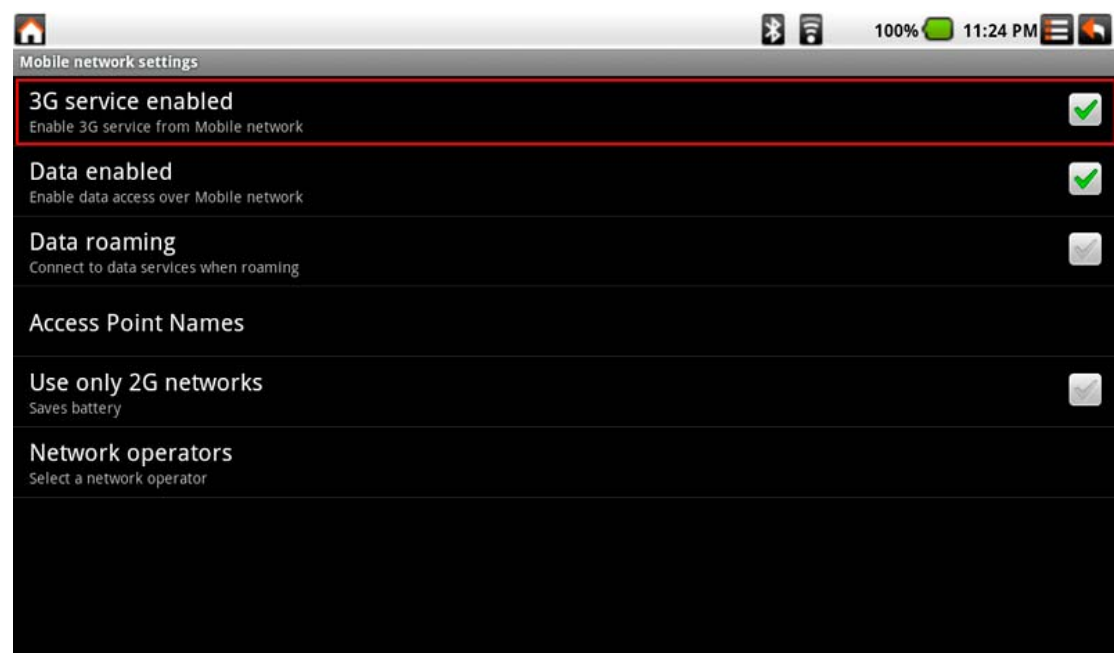


1. Settings
2. Mobile networks
3. 3G Service Enable : Tap  to 
4. Tap Home button in status bar.
5. Open internet application



NOTE: This function may not be available on your tablet (optional)

3.8 G Sensor

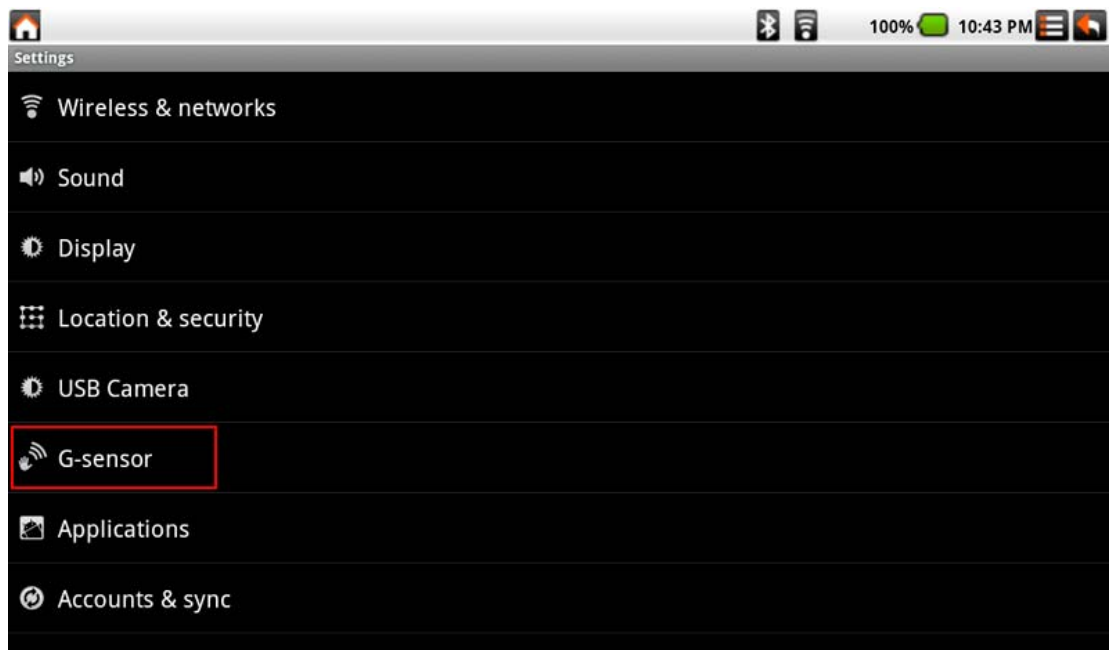

To consider some of applications/Games, here to provide a “Game Mode” for adjusting the direction of screen rotation.


4.0 How to

4.1 How to do file transfer



1. Program -> iFileManager
2. For Data transfer from external USB device or Micro SD into Mobii Tablet PC.

4.2 How to connect to Application store

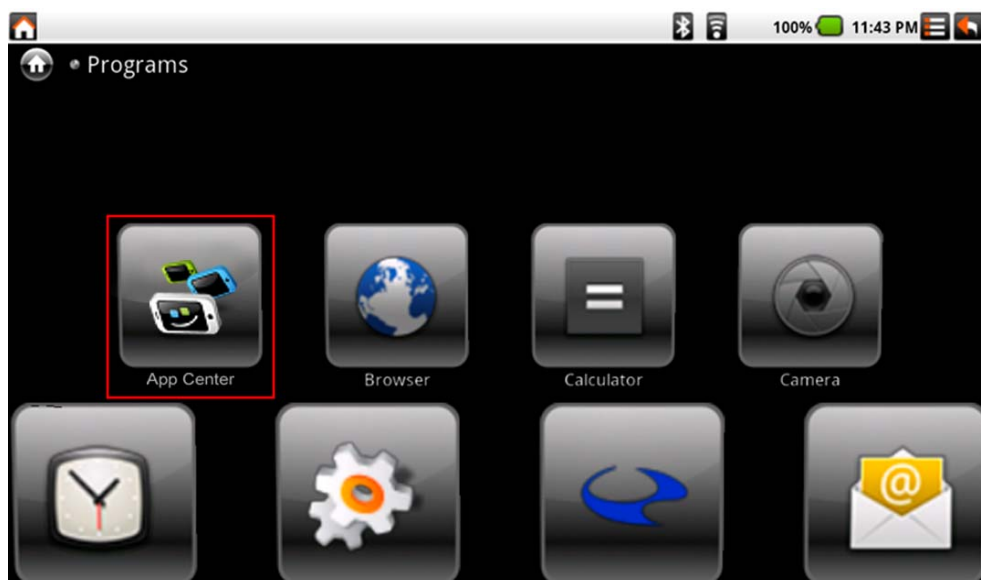

1. Program -> App Center